



Ruger 10/22 “Fireswitch” Extended Magazine Release Installation Instructions

V1.0

www.tandemkross.com

For more info or support contact CustomerService@tandemkross.com


Attention: Before you begin, be certain that the firearm is safe.

Remove the magazine and inspect the chamber making sure that it is empty.

We recommend that if you are not comfortable with disassembly of your gun that you consult a gunsmith.

Follow the disassembly and reassembly instructions in the Ruger 10/22 owners manual to remove/reinstall the receiver assembly and the trigger guard.


1. Remove the cross pin, shown in the included picture, by using a punch or similar tool and pushing it from RIGHT to LEFT.

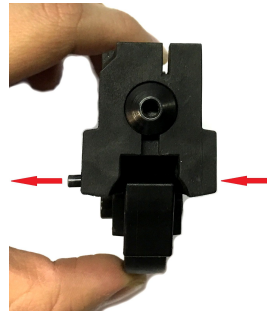

2. BE AWARE that the magazine latch plunger is SPRING LOADED. Remove the factory magazine release by pulling down on it.



3. Depress the magazine latch plunger and slide the Fireswitch Extended Magazine Release in place, as shown in the image. Releasing the latch plunger will hold the Fireswitch in place.

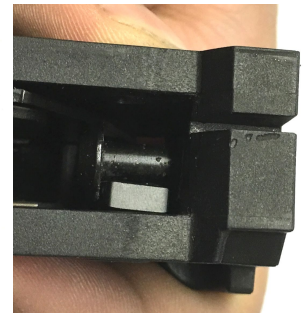

4. Be sure that all through holes are aligned before reinstalling the cross pin. To reinstall the cross pin push the pin from LEFT to RIGHT.

