



**Attention:**

**Before you begin, be certain that the firearm is clear and safe.**

Step 1: Lock the bolt back in the open position. This allows easy access for attaching the charging handle to the bolt.



Step 2: Slide the Halo charging handle onto the back of the bolt. This is often easier from the bottom side of the bolt sliding it up toward the top. The large curved edge of the charging handle faces down. The Tandemkross Logo is upright.



Step 3: Install and tighten the included 5-40 7/8" socket cap screw. Do not overtighten the screw. The charging handle grips tightly to the bolt. Some blue loctite is recommended to keep it from working loose.



**ATTENTION:** If the bolt does not tighten down and feels like it is bottoming out in the halo before it tightens all the way remove the bolt and clean out the threads but taping the halo on a firm surface. If this does not resolve the problem, you can shorten the bolt or contact TANDEMKROSS for a replacement.