

Ruger® MKIV 22/45 Thumb Rest by Striplin Custom Guns

1. Check to make sure the firearm is unloaded per Ruger instructions
2. Remove receiver per Ruger instructions
3. Remove screw pin from front lug
4. Use thumb rest and pin to push trigger pin out of the frame while holding the trigger pin retaining spring down with a small punch
5. Install and lightly tighten front screw. You may use a small amount of Loctite to help prevent screw from loosening.

Keep the original pin and screw in case you have to return the gun for warranty work.