



**Front Fiber Optic Sight
for Taurus™ TX-22
Installation Instructions
V1.0**

www.tandemkross.com

For more info or support contact CustomerService@tandemkross.com

Attention:


Before you begin, be certain that the magazine is removed and the chamber is clear.

You will need a 5/64" allen wrench and a 1.5 mm allen, both are included with sight


1. Remove the slide, recoil spring and barrel.



2. Remove the original front sight using the 5/64" allen wrench.

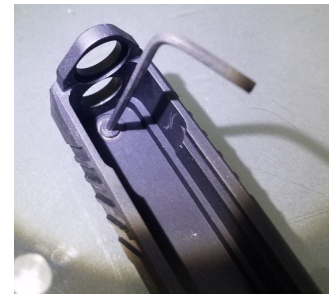

3. Remove the 2.5 mm screw from the new fiber optic sight using the 1.5 mm allen wrench. The screw is pre-installed in the new sight with medium strength thread locker. (Do not use original screw to install new fiber sight, the thread size is different)

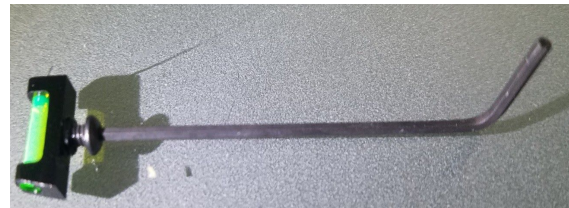

4. Place the sight into the slotted hole in the slide with the serrated face toward the rear of the firearm.



5. Install the brass washer on the screw and firmly tighten the screw using 1.5 mm allen wrench while keeping sight in proper alignment.

6. Install the barrel, recoil spring, and slide.

You have successfully completed the installation. Enjoy your new TANDEM KROSS TX-22 Front Fiber Optic Sight.

